


# QUICK INSTALLATION GUIDE

Below are basic instructions for installing your ACN Video Phone Links. Please see the enclosed Easy Start Guide for instructions on setting up a local area, gaming or entertainment network.

1. Locate the electrical outlet closest to your router or modem.
2. If you have an existing video phone, unplug the video phone from the Ethernet port on your router or modem.
3. Connect one end of the gray Ethernet cable into an open Ethernet/LAN port on your router or modem.

4. Connect the other end of the gray Ethernet cable to the first ACN Video Phone Link.
5. Plug the ACN Video Phone Link into the electrical outlet.

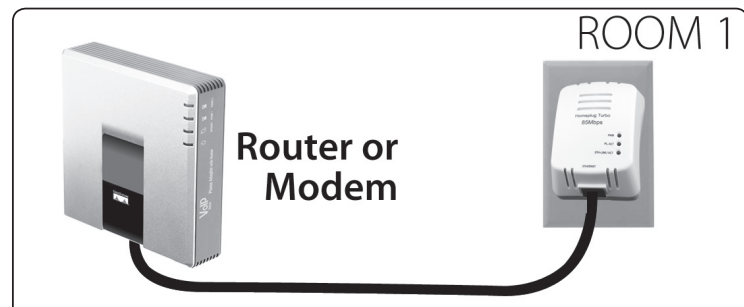

6. Place your ACN Video Phone, the second ACN Video Phone Link and the gray Ethernet cable in the desired location.
7. Locate the electrical outlet closest to your desired location.



8. Plug one end of the gray Ethernet cable into the Blue WAN port on your ACN Video Phone.
9. Plug the other end into the ACN Video Phone Link.
10. Plug the second ACN Video Phone Link into the electrical outlet.

**Congratulations – you have successfully installed your ACN Video Phone Links!**

If you experience difficulties installing your ACN Video Phone Links, please contact ACN Digital Phone Technical Support: US/PR 1-888-414-1958 or Canada 1-866-913-3445.